



SAFETY INSTRUCTIONS

PLEASE READ THIS MANUAL FIRST

Thank you for a buying β_3 product. Read this manual first as it will help you operate the system properly. Please keep this manual for future reference.

WARNING: This product must be installed by professionals. When using hanging brackets or rigging other than those supplied with
the product, please ensure they comply with the local safety codes.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and servicing instructions.

ATTENTION: Don't refit the system or spare parts without being authorized as this will void the warranty.


A WARNING: Don't place naked flames (such as candles) close to the equipment.

- 1. Read the instruction manual first before using this product.
- 2. Please keep this manual for future reference
- 3. Pay attention to all warnings.
- 4. Obey all operating instructions.
- 5. Do not expose this product to rain or moisture.
- 6. Clean this equipment with a dry cloth.
- 7. Do not block any ventilation openings. Install according to manufacturer's instructions .
- 8. Do not install this product near any heat source, such as a, heater, burner, or any other equipment with heat radiation .
- 9. Only use spare parts supplied by the manufacturer.
- 10. Pay attention to the safety symbol on the outside of the cover.



CONTENT

INTRODUCTION	3
Features	3
Description	3
Applications —	3
CONNECTION	4
Terminal Plate	4
NL4 Connection —————————————————————	— 4
System Connection Reference	— 4
Loudspeaker Connection	— 5
INSTALLATION	6
Mounting Accessories	6
Installation Reference	6
TECHNICAL SPECIFICATION	7
TechnicalSheet	7
Frequency Response And Impedance Curve ———	7
2D Dimension	8

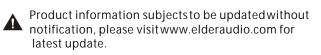



MU15

15" two wayfull range speaker with built-in crossover

Features

- Two wayfull range phase inverted speaker with 15" woofer and 3" compression driver.
- Dispersion 60°x40°, the controlled frequency reach to 1kHz.
- Advanced free protection design assure the reliability of tweeter.
- Sensitivity 98dB, Max.SPL124dB.
- Rated power 360W, peak power 1440W.
- Standard flying mountingsystem.
- The necessary flying mounting accessories will be attached, the Max.installation weight reach to 385Kg to make the safety of speaker.
- Powder coatedgrille can be used outdoors for 5 years. The foam backside of the grille can prevent therain.
- The new paint materials and advanced painting technology make the surface very rigid.

Description

 β 3[®] MU15 is a two way full range speaker adopting the new structure and new painting technology. It integrates one 15" Neodymium woofer with 75MM voice coil and one 3" compression driver. The rated power is 360W, the peak power is 1440W. Symmetrical magnet circuit design reduce the impar HD effectively and enhance the LF sound quality.


Neodymium transducers reduce 15% weight.

Cabinet is made of 15mm birch plywood with advanced environmental protection Polyurethane-based painting which is very rigid. The cabinet strength reach to 4500N. Q235 grille is coated by powder to provide strong ultra-Weatherability, can be used outdoors for 5 years. The backside foam of grille can prevent the rain.

MU15 adopts the protection free design, which reduce the interfere and enhance the sound quality.

A lot of new materials were used on MU15, for example, the diaphragm is made from magnalium to meet the sound requirement.

MU15 is mainly designed for conference room, multifunctional hall, auditorium, church, living performance.

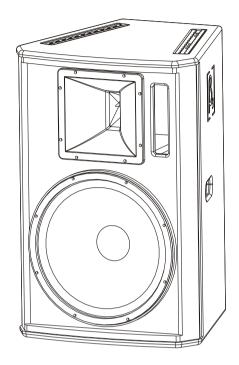


Applications

- Church
- Small Auditorium
- Conference room
- Small performance
- Multifunctional hall




Two NL4 connectors are available for amplifier connection. Paralelled connector is very convenient for another speaker connection.

TerminalPlate

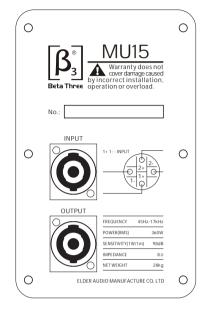


1+ 1- INPUT

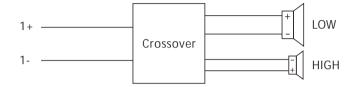


NL4 Connection

1. Connect

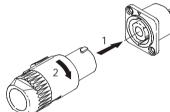

System Connection Reference

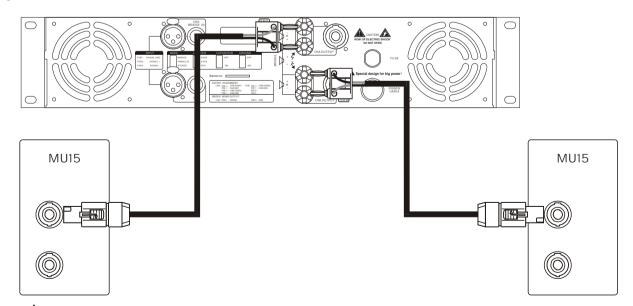


2. Disconnect

Attention: The impedance of connected speaker must match the impedance of amplifier output.
 Attention: Make sure the polarity of speaker and amplifier correctly.


CONNECTION



Speaker Wiring

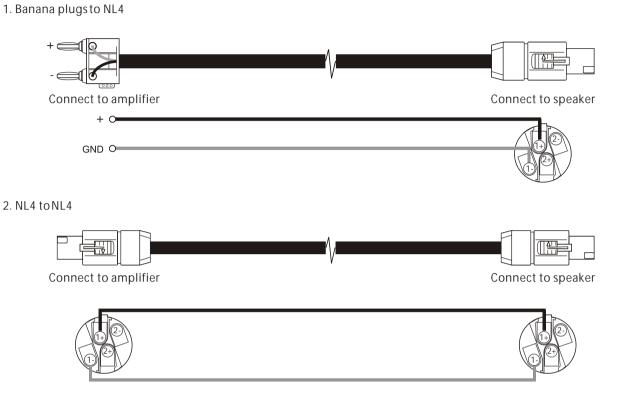

3. Consumption curve of connection cable(Only for reference, the result is different if adopting the different cables)

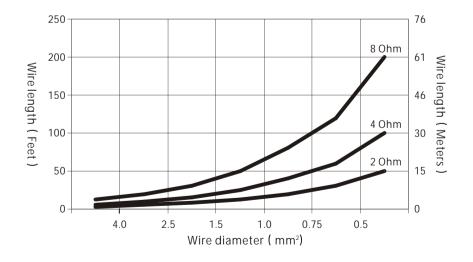

5



Mounting Accessories

The standard flying mounting hardware is very convenient for different installations and applications.

1. Speaker stand SPS-502BC black




2. Standard flyingmounting ring



Warning: Make sure the mounting accessories safety factor not less than 5:1 or meet the local standard during installation.

Installation Reference

1. Vertical flying mounting installation

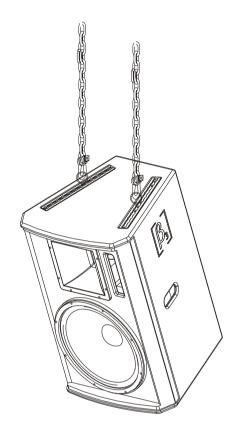

2. Horizontal flying mounting installation





Technical Specification

System:	Passive full range wooden speaker with painting
Tweeter:	1×3"compression driver
Woofer:	1×15"Neodymium woofer
Frequency response(-3dB) ¹	45Hz-17kHz
Frequency response(-10dB):	35Hz-20kHz
Sensitivity(1W@1m) ²	98dB
Max. SPL(1m) ³	124dB/130dB(PEAK)
Power:	360W (RMS) ⁴ 720W (MUSIC) 1440W (PEAK)
Dispersion ($H \times V$) :	$60^{\circ} \times 40^{\circ}$
Rated impedance:	8 Ohms
Crossover point:	1.7kHz
Cabinet:	Wedge shape
Mounting accessories:	Standard flying mountinghardware
Handle:	$2 \times$ Wooden handle
Painting:	Cabinet coated byPolyurethane paint; grille is powdercoated
Connector:	NL4×2
Cabinet dimension: (W×D×H)	485×485×720mm (19.1×19.1×28.4in)
Package dimension: (W×D×H)	595 × 595 × 840mm (23.4 × 23.4 × 33.1in)
Net weight(pc):	28.0kg(61.6 lb)
Gross weight(pc):	32.5kg(71.5 lb)
Optional mounting accessories:	Flying mounting ring, speaker stand

Speaker Testing Method

1. Frequency Response

Use Pink noise to test the speaker in the anechoic chamber, adjust the level to make the speaker work at its rated impedance and set the output power at 1W, then test the frequency response 1m away from the speaker.

2. Sensitivity

Use full range Pink noise which has been modified using an EQ curve to test the speaker in the anechoic chamber, increasing the signal to make the speaker work at its rated impedance and set the power output at 1W, then test the sensitivity 1m away from the speaker.


3. MAX.SPL

Use full range Pink noise which has been modified using an EQcurve to test the speaker in the anechoic chamber, increase the signal to make the speaker work at its maximum power output level, then test the SPL1m away from the speaker.

4. Rated Power


Use Pink noise to the IEC#268-5 standard to test the speaker, increase the signal for a continuous period of 100 hours, the rated power is the power when the speaker will show no visible or measurable damage.

Frequency response curve & Impedance curve

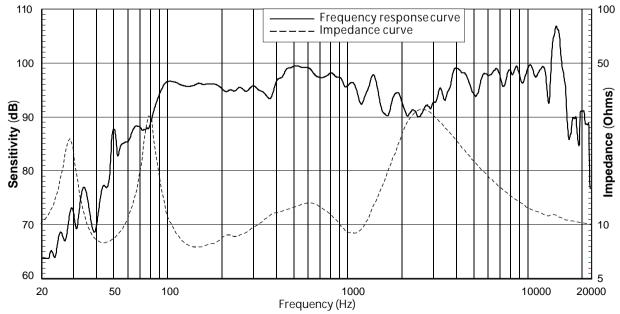





2D Dimension

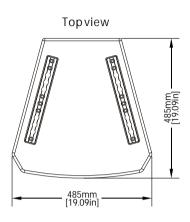


Side view

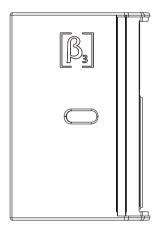




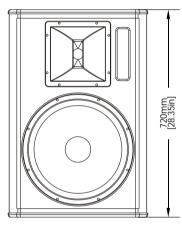

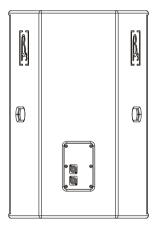

Back view

Bottom view

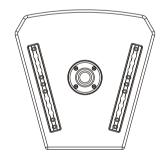

Notes:



www.elderaudio.com